

920i® FlexWeigh Systems Fillers/Batchers**STANDARD FEATURES**

- Wallmount stainless steel enclosure
- Application program 101, 102, 103, 104, 201, 202
- Front panel switches E-Stop, Reset/Resume, Start
- Softkeys for presets, CN#, ID#, formula#, totals
- Accumulating subtotal & total registers
- Transmitted audit trail
- Digital I/O Board
- Relay rack and SSR relay outputs

APPROVALS

Manufacturer-Approved
DIRECT REPLACEMENT FOR FLEXWEIGH'S DWM-IV

**SPECIFICATIONS**

| STANDARD SWITCHES | 101/103/104 | 102 | 201 | 202 |
|-------------------|-------------|-----|-----|-----|
| E-Stop mushroom | X | X | X | X |
| Reset/resume | X | X | X | X |
| Start | X | X | X | X |
| Discharge | - | X | - | X |

NEW

| OUTPUTS | 101 | 102 | 103 | 104 | 201 | 202 |
|-----------------|-----|-----|-----|-----|-----|-----|
| Fast fill** | X | X | X | X | X | X |
| Slow fill*** | X | X | X | X | X | X |
| Fill complete* | Opt | Opt | X | X | Opt | Opt |
| Zero tolerance | Opt | Opt | - | - | Opt | Opt |
| Discharge | - | X | - | - | - | X |
| Refill | - | - | X | - | - | - |
| Refill complete | - | - | Opt | - | - | - |
| Slow cycle | - | - | Opt | X | - | - |

* Dispense for 103 and 104

** Fast Fill Ingredient 1 201/202

*** Fast Fill Ingredient 2 201/202

101 Basic Filler

Place an empty container on the scale. Automatically fill the container to a preset weight. Remove the container from the scale. Replace it on the scale with an empty and repeat the process.

102 Automatic Fill, Automatic Discharge

Place an empty container under the scale. Automatically fill the scale to a preset weight. Discharge the scale into the container. Remove the container from under the scale. Replace it under the scale with another empty container and repeat the process.

103 Loss-In-Weight Filler

Dispense preset net weight quantities from the scale until either low level or less-than-preset gross weight is achieved. Then refill to high level.

104 Loss-In-Weight Filler

Product supply containers are placed on the scale. Net weight quantities are dispensed from the containers until empty. When containers empty in the middle of a dispense cycle, the cycle is paused and allowed to resume where it left off when the empty containers are replaced on the scale with filled ones.

201 Four Ingredient Dual Speed or Eight Ingredient Single Speed Batcher

Place empty container on scale, automatically fill multiple ingredients in a sequential order to preset formula weights. Remove the container, replace with empty and repeat

202 Four Ingredient Dual Speed or Eight Ingredient Single Speed With Discharge

Fill tank or hopper with multiple ingredients in a sequential order then empty into a vessel below.

920i® FlexWeigh Systems Fillers/Batchers**PART NUMBER/PRICE**

| PART # | DESCRIPTION | EST. SHIP WEIGHT | PRICE |
|---------------|---|------------------|---------|
| 120320 | 920i FlexWeigh Systems 101 | 23 lb | Consult |
| 120321 | 920i FlexWeigh Systems 102 | 23 lb | Consult |
| 120322 | 920i FlexWeigh Systems 103 | 23 lb | Consult |
| 120323 | 920i FlexWeigh Systems 104 | 23 lb | Consult |
| — | 920i FlexWeigh Systems 201 | 23 lb | Consult |
| — | 920i FlexWeigh Systems 202 | 23 lb | Consult |
| Relays | | | |
| 52312 | 8-channel relay rack (4 slots) | | Consult |
| 52316 | 2-channel output relay, 120 - 140 VAC at 2A | | Consult |
| 52317 | 2-channel output relay, 240-280 VAC at 2A | | Consult |

OPTIONS/ACCESSORIES

| PART # | DESCRIPTION | PRICE |
|--------|-----------------------------------|---------|
| 120491 | 920i FlexWeigh Systems 101 manual | Consult |
| 120493 | 920i FlexWeigh Systems 102 manual | Consult |
| 124473 | 920i FlexWeigh Systems 103 manual | Consult |
| 120496 | 920i FlexWeigh Systems 104 manual | Consult |
| — | 920i FlexWeigh Systems 201/202 | Consult |

OPTIONAL SWITCHES**INSTALLED PRICE CONSULT**

| SWITCH PART # | LEGEND PART # | 101 | 102 | 103/104 | 201 | 202 |
|------------------------------|---------------|-----|-----|---------|-----|-----|
| Selector 3 position | 94296 | | | | | |
| Manual / Off / Auto | 121035 | X | X | X | X | X |
| Manual Ingredient Select | | | | | X | X |
| Push-button | 94276 | | | | | |
| Fill | 121036 | X | X | | X | X |
| Discharge | 121037 | | X | | | X |
| Dispense | 121038 | | | X | | |
| Refill | 121039 | | | X | | |
| Maintained/Off/Spring Return | 94299 | | | | | |
| Fill On/-/Jog | 121040 | X | X | | X | X |
| Fill Fast/-/Slow | 121041 | X | X | | X | X |
| Discharge On/-/Jog | 121043 | | X | | | X |
| Discharge Fast/-/Slow | 121044 | | X | | | X |
| Dispense On/-/Jog | 121046 | | | X | | |
| Dispense Fast/-/Slow | 121048 | | | X | | |
| Refill On/-/Jog | 121049 | | | X | | |
| Manual Feed | — | | | | X | X |

OPTIONAL FRONT PANEL LIGHTS**INSTALLED PRICE CONSULT**

| LAMP | LEGEND | 101/102 | 103 | 104 |
|---------------------|--------------------|---------|-----|-----|
| Ready | 94289 Green 121051 | X | | X |
| Fill Complete | 94290 Red 121052 | X | | X |
| Filling | 98760 Amber 121053 | X | | |
| Filling Fast | 98760 Amber 121054 | X | | |
| Filling Slow | 98760 Amber 121055 | X | | |
| Discharging | 94292 Blue 121056 | X | | X |
| Discharging Fast | 94292 Blue 121057 | X | | |
| Discharging Slow | 94292 Blue 121058 | X | | |
| Dispensing | 98760 Amber 121059 | | X | X |
| Dispensing Fast | 98760 Amber 121060 | | X | X |
| Dispensing Slow | 98760 Amber 121061 | | X | X |
| Dispensing Complete | 94290 Red 121062 | | X | X |
| Refilling | 94292 Blue 121063 | | X | |
| Refill Complete | 94290 Red 121064 | | X | |
| Low Supply | 94290 Red 121065 | | X | X |
| Fill Time Alarm | 94290 Red 121066 | | X | X |
| Feeding (1-4) | 98760 Amber — | | | X |
| | | | | |
| | | | | |



920i® FlexWeigh Systems Bulkweighers



Manufacturer-Approved
DIRECT REPLACEMENT FOR FLEXWEIGH'S DWM-IV

STANDARD FEATURES

- Wall mount stainless steel enclosure
- Application program 107,108,109
- Front panel switches E-Stop, Start/Resume, End Cycle, Ship/Recv (only 109)
- Softkeys for presets, ID1 and ID2
- Accumulating weight streaming
- Fill and discharge sequence controls
- Fill and discharge gate monitoring
- Printer online checking
- Weigh and surge hopper overflow monitoring
- Transmitted audit trail
- Digital I/O Board
- Relay rack and SSR relay outputs

OPTIONS

- Pilot lights for error indication
- Manual override switches

APPROVALS



SPECIFICATIONS

| STANDARD SWITCHES | 107 | 108 | 109 |
|-------------------|-----|-----|-----|
| E-Stop mushroom | X | X | X |
| Start/resume | X | X | X |
| End Cycle | X | X | X |
| Ship/Recv | - | - | X |

| OUTPUTS | 107 | 108 | 109 |
|------------------------|-----|-----|-----|
| Fill Gate closed* | X | X | X |
| Discharge Gate closed* | X | X | X |
| Surge hopper not full* | X | X | X |
| Weigh hopper not full* | X | X | X |
| Printer online* | X | X | X |
| Slow cycle alarm | OPT | OPT | OPT |
| Gate alarm | OPT | OPT | OPT |
| Scale over fill alarm | OPT | OPT | OPT |
| Lower surge alarm | OPT | OPT | OPT |
| Printer alarm | OPT | OPT | OPT |
| Open fill gate | X | X | X |
| Open discharge gate | X | X | X |

* Denotes input

107 Shipping Bulkweigher

The 920i FlexWeigh 107 is designed for basic shipping-mode bulkweighing applications. In shipping mode, a scale is loaded and discharged repetitively until the accumulated weight meets the overall target value.

108 Receiving Bulkweigher

The 920i FlexWeigh 108 is designed for basic receiving mode bulkweighing applications. In receiving mode, a scale is loaded and discharged until there is no more product to receive. To end the cycle the End Cycle button is pressed.

109 Ship/Receive Bulkweigher

The 920i FlexWeigh 109 allows the user to select which mode of operation to use. This is done with a three-position locking key switch.



920i® FlexWeigh Systems Bulkweighers

PART NUMBER/PRICE

| PART # | DESCRIPTION | EST. SHIP WEIGHT | PRICE |
|---------|----------------------------|------------------|---------|
| Consult | 920i FlexWeigh Systems 107 | 23 lb | Consult |
| Consult | 920i FlexWeigh Systems 108 | 23 lb | Consult |
| Consult | 920i FlexWeigh Systems 109 | 23 lb | Consult |

OPTIONS/ACCESSORIES

| PART # | DESCRIPTION | PRICE |
|--------|---|---------|
| 151848 | 920i FlexWeigh Systems 107/108/109 manual | Consult |

OPTIONAL SWITCHES

INSTALLED PRICE CONSULT

| TYPE | | 107 | 108 | 109 |
|---------------------|------------------------------|-----|-----|-----|
| Manual / Off / Auto | 3 position key selector | X | X | X |
| Man Fill | On/-/Jog | | X | X |
| Man Disch | On/-/Jog | | X | X |
| | Maintained/Off/Spring Return | | | |

OPTIONAL FRONT PANEL LIGHTS

INSTALLED PRICE CONSULT

| LAMP | | | 101/102 | 103 | 104 |
|----------------|-------|-----|---------|-----|-----|
| Slow Cycle | 94290 | Red | X | X | X |
| Gate Fault | 94290 | Red | X | X | X |
| Scale Overfill | 94290 | Red | X | X | X |
| Surge Backup | 94290 | Red | X | X | X |
| Printer | 94290 | Red | X | X | X |

INDICATORS/CONTROLLERS



920i® FlexWeigh Systems Flow Rate Controllers



STANDARD FEATURES

- Wall mount stainless steel enclosure
- Application program 105, 106, 205
- Front panel switches E-Stop, Reset/Resume, Start
- Softkeys for presets, CN#, ID#, formula#, totals
- Accumulating subtotal & total registers
- Transmitted audit trail
- Digital I/O Board
- Relay rack and SSR relay outputs

APPROVALS

Manufacturer-Approved
DIRECT REPLACEMENT FOR FLEXWEIGH'S DWM-IV



SPECIFICATIONS

| STANDARD SWITCHES | 105 | 106 | 205 |
|-------------------|-----|-----|-----|
| E-Stop mushroom | X | X | X |
| Reset/resume | X | X | X |
| Start | X | X | X |
| Discharge | - | - | X |

| OUTPUTS | 105 | 106 | 205 |
|-----------------|-----|-----|-----|
| Fast fill** | X | - | X |
| Slow fill*** | X | - | X |
| Fill complete* | X | - | X |
| Zero tolerance | Opt | - | Opt |
| Discharge | X | X | X |
| Refill | - | X | - |
| Refill complete | - | Opt | -- |
| Slow cycle | Opt | Opt | Opt |

* Dispense for 105 and 106

** Fast Fill Ingredient 1 205

*** Fast Fill Ingredient 2 205

105 Basic Flow-Rate Controller

Dispense preset net weight quantities at preset flow rate values.

106 Loss-In-Weight with Flow-Rate Control and Automatic Refill

Dispense preset net weigh quantities at preset flow rate values with automatic refill when gross weight drops below threshold.

205 Eight Ingredient Batcher with Flow-Rate Control Discharge

Batch up to eight ingredients in sequential order to preset formula weights. Discharge to net quantities via preset flow- rate control.



920i® FlexWeigh Systems Flow Rate Controllers

PART NUMBER/PRICE

| PART # | DESCRIPTION | EST. SHIP WEIGHT | PRICE |
|---------------|---|------------------|---------|
| Consult | 920i FlexWeigh Systems 105 | 23 lb | Consult |
| Consult | 920i FlexWeigh Systems 106 | 23 lb | Consult |
| Consult | 920i FlexWeigh Systems 205 | 23 lb | Consult |
| Relays | | | |
| 52312 | 8-channel relay rack (4 slots) | | Consult |
| 52316 | 2-channel output relay, 120 - 140 VAC at 2A | | Consult |
| 52317 | 2-channel output relay, 240-280 VAC at 2A | | Consult |

OPTIONS/ACCESSORIES

| PART # | DESCRIPTION | PRICE |
|---------|-----------------------------------|---------|
| Consult | 920i FlexWeigh Systems 105 manual | Consult |
| Consult | 920i FlexWeigh Systems 106 manual | Consult |
| Consult | 920i FlexWeigh Systems 205 manual | Consult |



920i® FlexWeigh Systems Hand Batching



STANDARD FEATURES

- Stainless deep universal mount enclosure
- Application program 211
- Soft keys for presets ID#, Formulas, Totals Accumulating Subtotal and Total Registers
- Switch for manual confirmation
- 20 ingredient database
- 100 formula database
- Audit trail data output
- Ingredient usage totals

Manufacturer-Approved

DIRECT REPLACEMENT FOR FLEXWEIGH'S DWM-IV

211 Manual Batching System

Prompts the user through manual weight additions based on a pre-entered formula

PART NUMBER/PRICE

| PART # | DESCRIPTION | EST. SHIP WEIGHT | PRICE |
|--------|----------------------------|------------------|---------|
| | 920i Flexweigh Systems 211 | 13lb | Consult |